



# Physical IP Frequently Asked Questions

Version 1.0

**Non-Confidential**

Copyright © 2022, 2025 Arm Limited (or its affiliates).  
All rights reserved.

**Issue 02**

102818\_0100\_02\_en



## Physical IP Frequently Asked Questions

Copyright © 2022, 2025 Arm Limited (or its affiliates). All rights reserved.

### Release information

#### Document history

Issue	Date	Confidentiality	Change
0100-02	26 August 2025	Non-Confidential	This FAQ document is no longer maintained. For more information, refer to Arm's Product Status page.
0100-01	28 January 2022	Non-Confidential	Initial release

### Proprietary Notice

This document is protected by copyright and other related rights and the use or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm Limited ("Arm"). No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether the subject matter of this document infringes any third party patents.

The content of this document is informational only. Any solutions presented herein are subject to changing conditions, information, scope, and data. This document was produced using reasonable efforts based on information available as of the date of issue of this document. The scope of information in this document may exceed that which Arm is required to provide, and such additional information is merely intended to further assist the recipient and does not represent Arm's view of the scope of its obligations. You acknowledge and agree that you possess the necessary expertise in system security and functional safety and that you shall be solely responsible for compliance with all legal, regulatory, safety and security related requirements concerning your products, notwithstanding any information or support that may be provided by Arm herein. In addition, you are responsible for any applications which are used in conjunction with any Arm technology described in this document, and to minimize risks, adequate design and operating safeguards should be provided for by you.

This document may include technical inaccuracies or typographical errors. THIS DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS,

IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, any patents, copyrights, trade secrets, trademarks, or other rights.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Reference by Arm to any third party's products or services within this document is not an express or implied approval or endorsement of the use thereof.

This document consists solely of commercial items. You shall be responsible for ensuring that any permitted use, duplication, or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word "partner" in reference to Arm's customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of this document shall prevail.

The validity, construction and performance of this notice shall be governed by English Law.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its affiliates) in the US and/or elsewhere. Please follow Arm's trademark usage guidelines at <https://www.arm.com/company/policies/trademarks>. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

PRE-1121-V1.0

## Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

Unrestricted Access is an Arm internal classification.

## Product Status

The information in this document is Final, that is for a developed product.

## Feedback

Arm welcomes feedback on this product and its documentation. To provide feedback on the product, create a ticket on <https://support.developer.arm.com>

To provide feedback on the document, fill the following survey: <https://developer.arm.com/documentation-feedback-survey>.

## Inclusive language commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used language that can be offensive. Arm strives to lead the industry and create change.

This document includes language that can be offensive. We will replace this language in a future issue of this document.

To report offensive language in this document, email [terms@arm.com](mailto:terms@arm.com).

# Contents

<b>1. Physical IP frequently asked questions.....</b>	<b>6</b>
<b>2. General.....</b>	<b>7</b>
2.1 What documentation does Arm provide for my Physical IP.....	7
2.2 If I have download issues, who do I contact?.....	8
2.3 What if I am unable to generate views?.....	9
2.4 What do I do if I experience errors in EDA view verification?.....	11
2.5 What do I do if I experience errors in physical verification (DRC, LVS, or ERC)?.....	13
2.6 Why is Memory Explorer not generating datatables?.....	14
2.7 What to do if I experience silicon yield issues or failures?.....	15
2.8 What if I cannot find my issues here?.....	16
<b>3. Usage reporting.....</b>	<b>17</b>
3.1 What is Usage Reporting?.....	17
3.2 Why do I need to report on usage?.....	17
3.3 How do I access the Arm DesignStart usage reporting portal?.....	17
3.4 I am a DesignStart reporter. How do I add/replace a coworker as a new reporter?.....	17
3.5 When reporting a new or existing product into the usage reporting system, which product status should I pick?.....	18
3.6 How do I submit a product for certification?.....	18
3.7 Why can't I see the Certify button to submit a product for certification?.....	18
3.8 Why can't I edit my product information after it is submitted for certification?.....	19
3.9 What is product revision and when should I create a revision?.....	19
3.10 How do I attach the IP Confirmation Form, Artiscan Report or other relevant files to my product?.....	19
3.11 What are the reporting periods?.....	21
3.12 Why do I see an error when logging off?.....	22
3.13 Which browsers are compatible with the new reporting system?.....	22
3.14 What are the key things I will need to do in the new usage reporting system?.....	22
3.15 Can I submit a “zero report” if I don't have any products to report on, didn't tape out any wafer or have any status change for existing products?.....	23
3.16 Why am I unable to log in with my existing username and password?.....	23

# 1. Physical IP frequently asked questions

This FAQ document is no longer maintained. For more information, refer to the [Product Status](#) page.

This guide provides answers to frequently asked questions about Arm Physical IP.

## 2. General

This FAQ document is no longer maintained. For more information, refer to the [Product Status](#) page.

This section provides answers to general FAQs about Arm Physical IP.

### 2.1 What documentation does Arm provide for my Physical IP

Arm provides the following documentation for Physical IP:

- Memory Compiler

You can find the following documents in the `<install_path>/doc` directory of your compiler:

- User Guide: Describes supported memory configurations, pins, features, physical implementation guidelines, and how to use the compiler in GUI or command-line mode to generate EDA views.
- Power management app note: Describes how to transition the memory to or from low-power modes.
- Test and repair app note: Describes the memory test and repair features.
- EDA support app note: Describes how to use various memory views with different EDA tools.
- Voltus app note: Describes how to use Memory Compiler views to create Power Grid View (PGV) models for power analysis.

- Logic

- User Guide: Describes supported cell architectures and cell families. The user guide describes the supporting library kits for various implementation stages. You can download this user guide in the \*LD\* bundle.
- Databook: Describes the functional behavior and electrical characteristics of each cell family that is supported in a platform. You can find this document in the `<install_path>/doc` directory of your IP.

- GPIO

- Technical Reference Manual (TRM): Describes supported cell architectures, cell families, and their electrical characteristics. The TRM also describes physical implementation using Arm Artisan GPIO Products. You can find this document in the `<install_path>/doc` directory of your IP.
- Databook: Describes the functional behavior and electrical characteristics of each cell family that is supported in a platform. You can find this document in the `<install_path>/doc` directory of your IP.

- POP

- POP User Guide: Describes the processor, POP implementation methodology, IR drop analysis, floorplan trials, and PPA details. To read the user guide, download the \*PA\*-doc\* bundle. You can then find the guide in the <install\_path>/doc directory of your IP.

## 2.2 If I have download issues, who do I contact?

You can contact specific groups if you have the following issues:

- The required IP is not visible on the interface.
- The required IP version is not visible on the interface.
- IP permission or access issue
- Unable to download the IP
- Other download interface issues

The following table shows the contact email addresses for the download interfaces:


Download interface	Contact
Connect	support-connect@arm.com
Athena	pdg-ds-licensing@arm.com
PDH	pdg-ds-licensing@arm.com



## 2.3 What if I am unable to generate views?

If you are unable to generate views, use the following flow diagram to help you find a solution:

 **Figure 2-1: Generate views flow diagram**

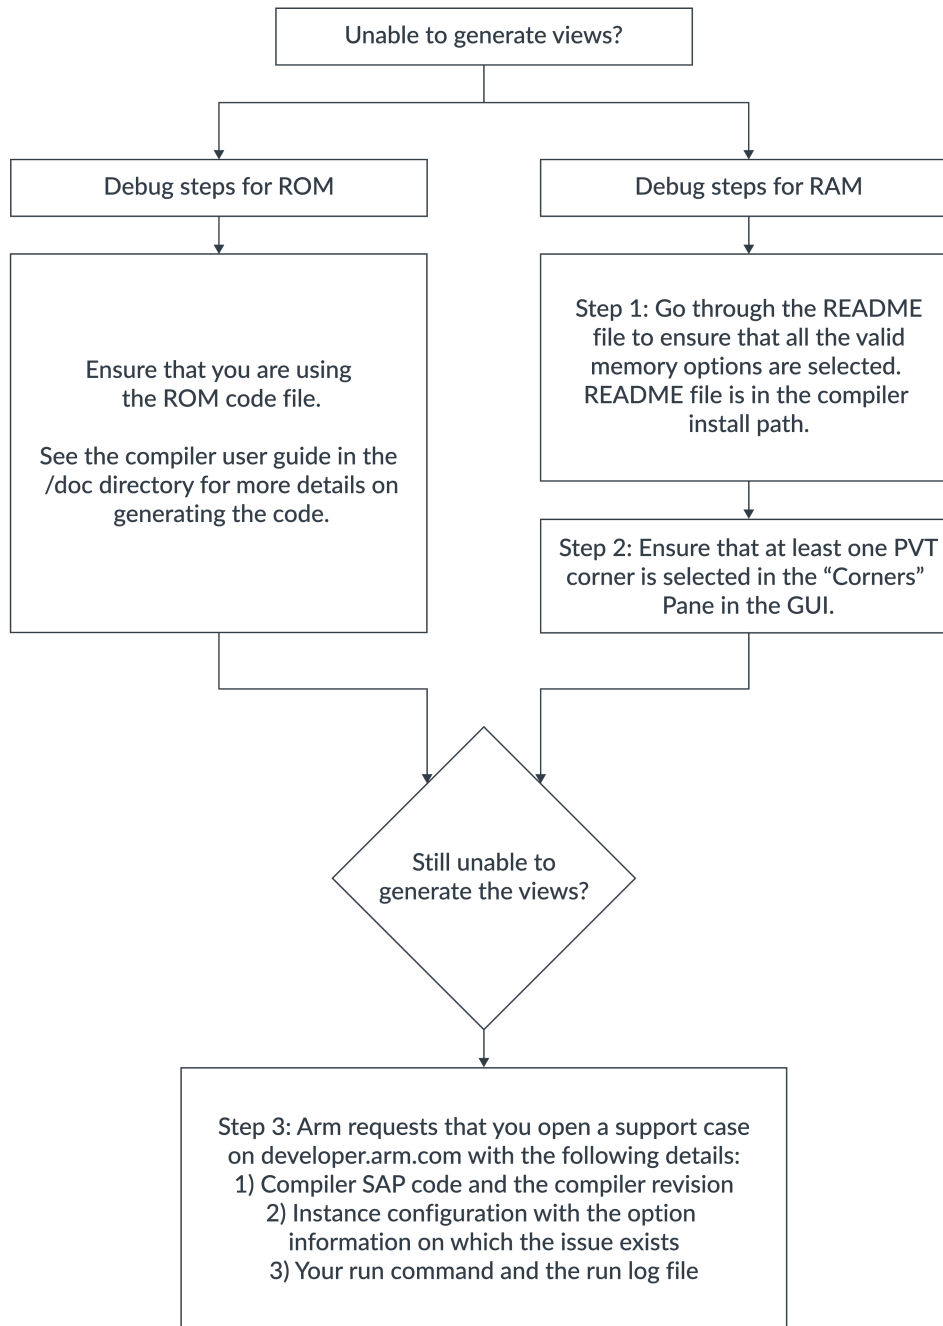

If you are using a ROM compiler:

1. Ensure that you have created a ROM code file (.rcf) and are pointing to it when generating a view. You can find more details about generating the ROM code file in the compiler user guide present in the <compiler\_install\_path>/doc directory.
2. If you are still unable to generate views, [open a support case](#) and provide the following details:
  - Compiler SAP code and the compiler revision
  - Instance configuration with the option information on which the issue exists
  - Your run command and the run log file


If you are using an SRAM, Register File, or MRAM compiler:

1. Navigate to <compiler\_install\_path>/ to review the compiler README.txt file.
2. Select the valid memory options.
3. For timing-dependent views, ensure that you have completed one of the following:
  - Select at least one PVT corner in the Corners Pane in the GUI.
  - Use the `-corners` option in the command line.
4. If you are still unable to generate views, [open a support case](#) and provide the following details:
  - Compiler SAP code and the compiler revision
  - Instance configuration with the option information on which the issue exists
  - Your run command and the run log file

## 2.4 What do I do if I experience errors in EDA view verification?

If you are experiencing errors in EDA view verification, use the following flow diagram to help you find a solution:

 **Figure 2-2: EDA view verification flow diagram**

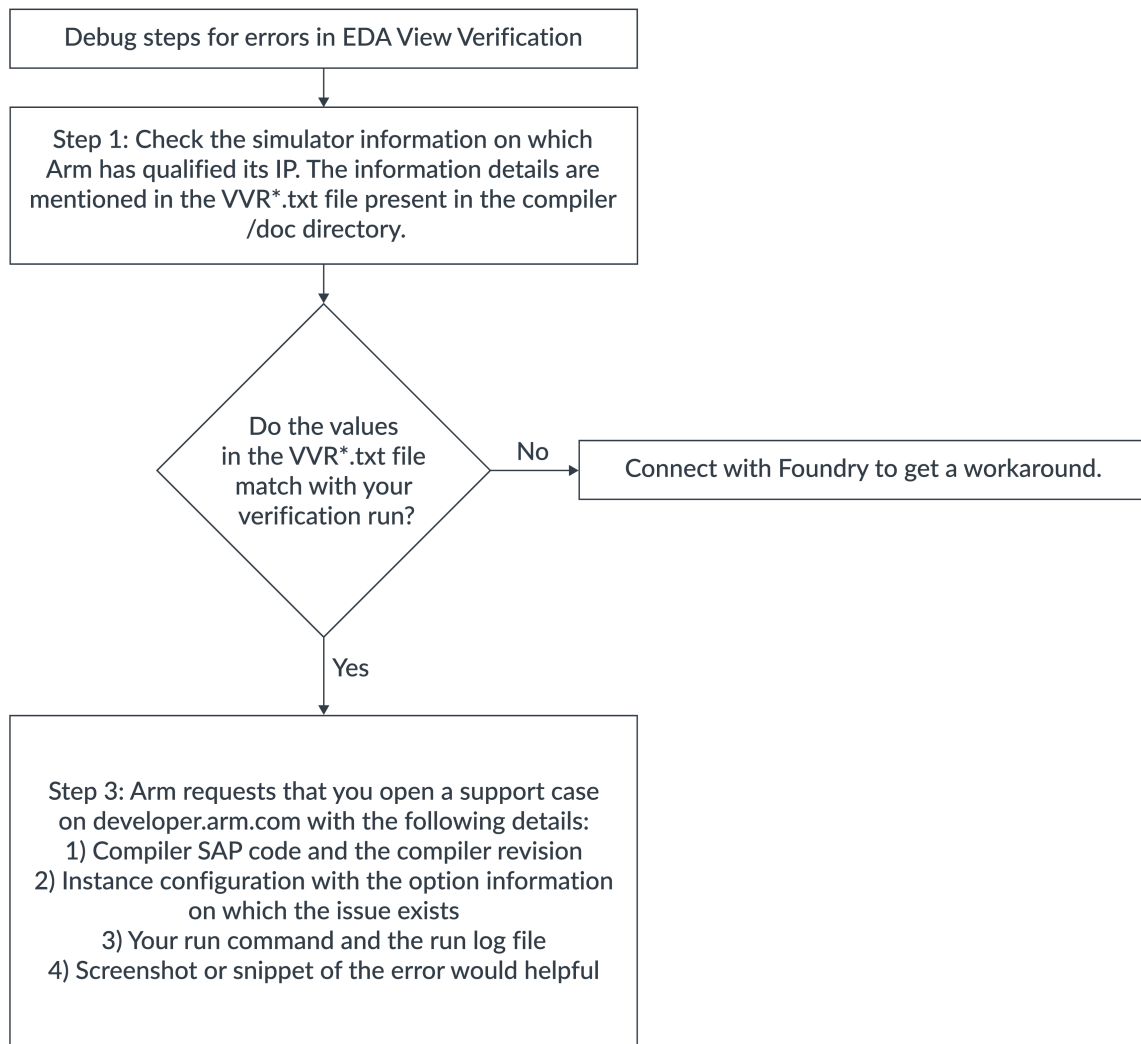

Navigate to the `<product_install_path>/doc` directory, and check the View Validation Report (vvr\*.txt) file. This file contains simulator information used in Arm IP qualification.

Do the simulator and the simulator version in the VVR file match with your verification run?


- No: Contact the foundry or EDA vendor to get a workaround.

- Yes: [Open a support case](#) and provide the following details:
  - Product SAP code and the product revision
  - Your run command and the run log file
  - Waveform, if applicable
  - For memories, provide memory instance configuration with the option information on which the issue exists.

## 2.5 What do I do if I experience errors in physical verification (DRC, LVS, or ERC)?

If you are experiencing errors in physical verification (DRC, LVS, or ERC), use the following flow diagram to help you find a solution:

 **Figure 2-3: Physical verification flow diagram**

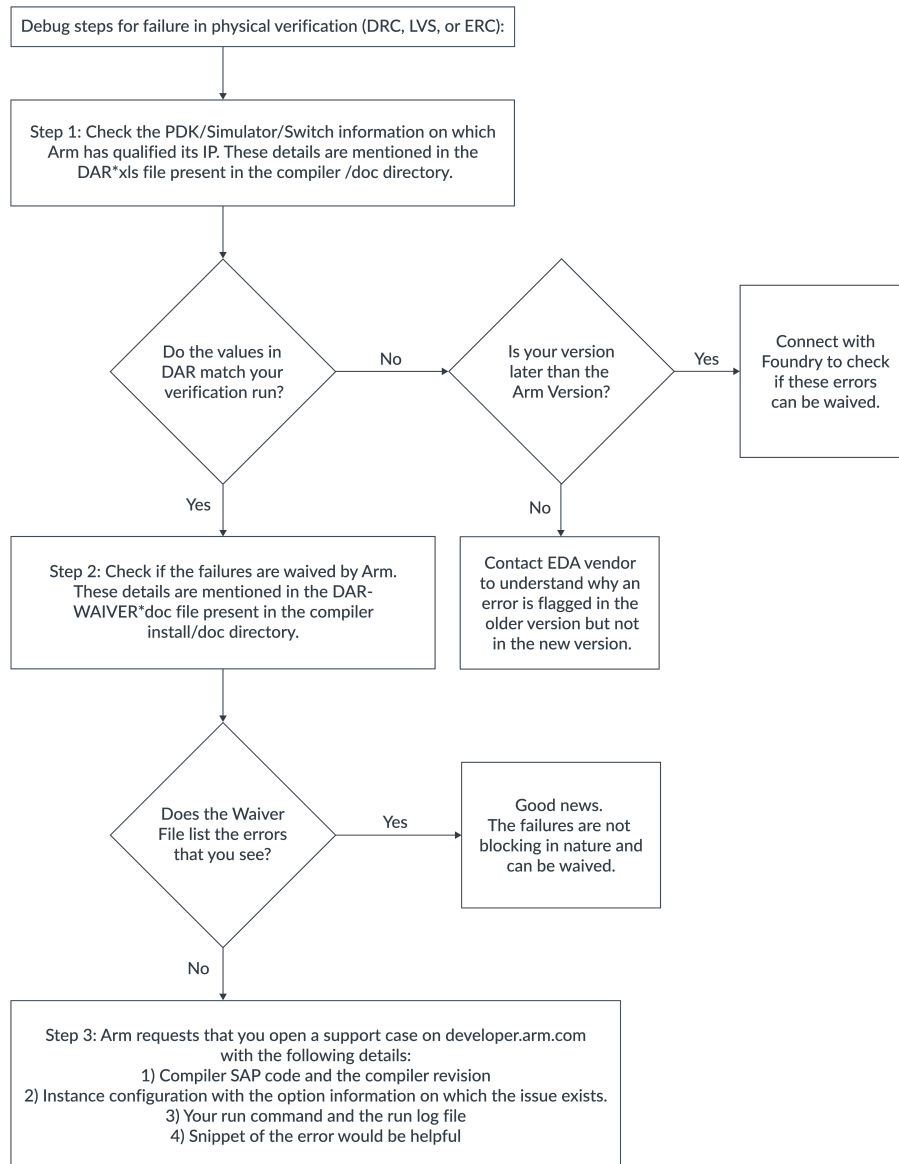

Navigate to the `<product_install_path>/doc` directory and check the Design Assurance Report (DAR\*.xls) file. This file contains PDK, simulator, and switch information that is used in Arm IP qualification.

Do the tool versions in the DAR\*.xls file match with your verification run?

- No:
  - If your tool versions are newer than the tool versions used by Arm during IP qualification, contact the foundry to check if your errors can be waived.
  - If your tool versions are older than the tool versions used by Arm during IP qualification, contact your EDA vendor to understand why the errors occur in an older version.
- Yes:
  - Navigate to the <product\_install\_path>/doc directory and check the DAR Waiver (DAR-WAIVER\*.doc) file. This file describes known errors that are waived by Arm during IP qualification.
  - If you do not see a waiver for your error, [open a support case](#) and provide the following details:
    - Product SAP code and the product revision
    - Your run command and the run log file
    - Snippet of the error
    - For memories, provide memory instance configuration with the option information on which the issue exists.

## 2.6 Why is Memory Explorer not generating datatables?

Check the following:

- If you are using multiple compilers, try to generate the datatables of a single compiler. Often, the switch options or settings are different between multiple compilers, resulting in errors.
- If you are unable to generate datatables using a single compiler, review the README\*.txt file that is in the <compiler\_install\_path>/ directory. Check the dependencies between the compiler options and VT Modes or Corners.
- If you are still unable to generate the datatable, [open a support case](#) and provide the following details:
  - Compiler SAP code and the compiler revision with the MemExplorer version
  - Instance configuration with the option information on which the issue exists
  - Your run command and the run log file
  - Screenshot of the error
  - Any input file that you are providing to MemExplorer

## 2.7 What to do if I experience silicon yield issues or failures?

Open a [support case](#) with the following details:

- Product SAP code and the product revision
- Foundry and process node
- Have you contacted the foundry about this failure? What was their response?
- List all Arm Physical IP products being used on this chip. Include the version of each product. For Memory products, include the size (word x bits and mux value) and the number of instances for each size.
- Which Arm Physical IP products do you have issues with? If there are multiple memory instances on a chip, do all instances show the same failure signature or behavior? Is there a yield difference between different instances?
- Describe the failure or failures in as much detail as possible.
- Are these failures observed from the parts on one wafer? One wafer lot? Multiple lots? What is the yield?
- Does parametric test data for this lot show that the wafers are within the process spec? If not, what is out of spec? Give details of the out-of-spec parameters.
- Did the foundry run any split lots? Is there any dependence to process corners?
- Is the failure voltage-dependent? What data do you have? Are shmoo plots available?
- Is the failure temperature-dependent? What data do you have? Are shmoo plots available?
- If you have noticed voltage or temperature dependency, have you tried writing at one voltage or temperature, and then reading at another for SRAM and RF? What are the results?
- From this scenario, can you determine whether the failure is in write mode or read mode? (Ignore this question for ROM issues.)
- If using Two-port Register File or Dual-Port SRAM memories, do you see simultaneous read/write access to the same address or to the same row in the same clock cycle in either the BIST or in the system?
- Is the failure frequency-dependent?
- Is the failure mechanism pattern-dependent? What data do you have? Describe the pattern.
- Is the memory tested by BIST? Can the memory be accessed by external pins?
- Is physical failure bit map available? Have you noted address locations failing at different voltages?
- Describe how power is connected to the failed instance or instances. How does that compare to other instances?
- How are these instances oriented on the chip? All in same orientation, or some orthogonal, or flipped 180-degrees? Is there a yield difference among different orientations?

## 2.8 What if I cannot find my issues here?

Contact [support-physical@arm.com](mailto:support-physical@arm.com) OR [open a support case](#) and provide the following details:

- Product SAP code and the product revision
- Your run command and the run log file
- For memories, provide memory instance configuration with the option information on which the issue exists.



## 3. Usage reporting

This FAQ document is no longer maintained. For more information, refer to the [Product Status](#) page.

This section provides answers to usage reporting FAQs about Arm Physical IP.

### 3.1 What is Usage Reporting?

Usage reporting is the reporting of LICENSEE products that contains Arm IP. This includes a set of basic product information that is defined in your agreement.

### 3.2 Why do I need to report on usage?

In exchange for the product that was downloaded from Arm DesignStart, LICENSEE agrees to report on each LICENSEE products. This includes a set of product information as defined in the agreement.

### 3.3 How do I access the Arm DesignStart usage reporting portal?

The URL for Arm DesignStart usage reporting portal is <https://usagereport.arm.com>. You will login through your Arm Single Sign-On. If you don't have an Arm user account yet, please sign up for DesignStart [here](#).

### 3.4 I am a DesignStart reporter. How do I add/replace a coworker as a new reporter?

Please contact your account owner or DesignStart Licensing Team [PDG-DS-Licensing@arm.com](mailto:PDG-DS-Licensing@arm.com) if there is a reporter role transition or you need to add a new user from your organization for usage reporting.

### 3.5 When reporting a new or existing product into the usage reporting system, which product status should I pick?

See the following table for details of the different product statuses:

Product Status	Definition
In design	Back end views of Arm IP have been downloaded and either evaluation work or chip design work have begun, but no tape out yet
MPW	MPW / Shuttle Run tape out
In production	Multi-Layer-Mask or full mask tape out in either prototype or production
End of Life	Tape out products terminated or reached end of life
Cancelled	In design products are cancelled without reaching tape out, or no longer exist (include details of reasons for product cancellation)

### 3.6 How do I submit a product for certification?

After creating and saving a new product, look for the Certify button at the upper right corner of the product detail page:

**Figure 3-1: Certify button on the product detail page**



### 3.7 Why can't I see the Certify button to submit a product for certification?

If you cannot see the **Certify** button next to the **Edit** button in the upper right corner of the product detail page, that means the product you just entered is not Certification Ready and is missing certain required information. Please click the "Edit" button to add all required information such as foundry part number and Arm IP to make it Certification Ready. The fields with an asterisk next to them will be all the required information.

If the product is still in design and you do not have a foundry part number, please wait until it has been taped out to submit for certification.

### 3.8 Why can't I edit my product information after it is submitted for certification?

Product information page will be automatically locked and not editable once submitted for certification. Please contact your account owner or DesignStart Licensing Team [DDG-DS-Licensing@arm.com](mailto:DDG-DS-Licensing@arm.com) if you find a typo or need to make changes to a product that's already been submitted for certification.

### 3.9 What is product revision and when should I create a revision?

Revision can be created for the following purposes:

- Tape out type changes from MPW to Full Mask.
- Tape out type stays the same, but revised tape out ends up with a new foundry part number.

When you create a revision, all existing product information will be pre-populated except for the following:

- Product name.
- Foundry part number.

### 3.10 How do I attach the IP Confirmation Form, Artiscan Report or other relevant files to my product?

If you already have the IP Confirmation Form and Artiscan Report in hand when you create a product, please upload them through the two upload buttons on the “Creating New Product” page:

**Figure 3-2: Create a new product menu**

The screenshot shows a web form titled "CREATING NEW PRODUCT" with a red asterisk icon and the text "\* required fields" in the top right corner. The form contains several input fields and file upload sections. At the top is a large empty text box. Below it is a label "Design Service Provider Email" followed by an empty text box. Underneath is a section header "Files" in blue. Below "Files" are two columns. The left column is labeled "Artiscan File" and contains a "Browse..." button and the text "No file selected.". The right column is labeled "IP Confirmation File" and also contains a "Browse..." button and the text "No file selected.".


If you don't have those files at the moment, please go ahead and submit your product. Your account owner in the DesignStart Licensing Team will assist you with the generation of the files when they review your product certification.

Download the Artiscan tool [here](#).


## Other files

If you'd like to attach other relevant files to the product, after creating and saving the new product, on the product detail page, click “Files” on the left to upload file:

**Figure 3-3: Upload other files screenshot**

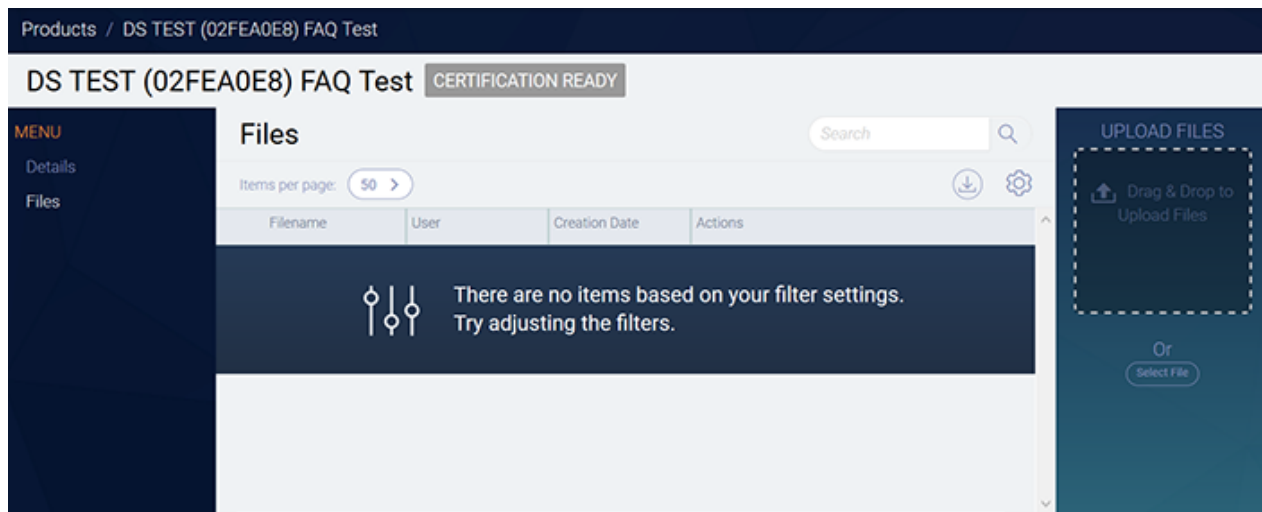 

**Figure 3-4: Click files screenshot**

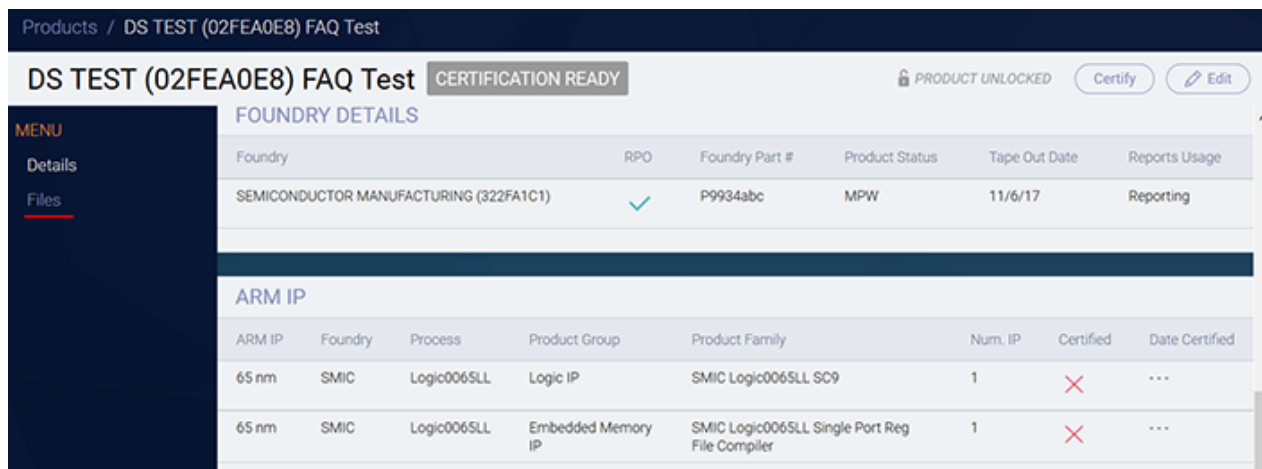 

## 3.11 What are the reporting periods?

The reporting periods are as follows.

### Product certification

You can add new products and submit for certification anytime throughout the quarter. For new tape outs, preferably right after the product has been taped out for more accurate data.

### Usage reporting

The following table shows the usage reporting periods:

Period	Usage report
January 1–31	Q4 report
April 1–30	Q1 report
July 1–31	Q2 report
October 1–31	Q3 report

We will suspend accounts that are delinquent in fulfilling usage report at the end of the reporting window. Once suspended, your download function in DesignStart will be taken away. Suspended accounts will still be able to submit usage reports for current and previous quarters at <https://usagereport.arm.com>. Once we have received missing usage reports, we will reactivate your account.

## 3.12 Why do I see an error when logging off?

This is a known error that we are correcting. Although the error is appearing, you can be assured that you have successfully logged out.

**Figure 3-5: Screenshot of the logging off error**



## 3.13 Which browsers are compatible with the new reporting system?

We recommend you use Google Chrome and Mozilla Firefox for the best performance of our new reporting system. We are looking to make IE compatible as well, but will come later.

## 3.14 What are the key things I will need to do in the new usage reporting system?

The key things you will need to do in the new usage reporting system are as follows:

- Products - to create new products, submit for certification
- Usage Reports - to update and submit the quarterly usage report
- Follow-Ups - if Arm has any questions about the products or reports you submitted, your account owner will reach out to you by sending you a follow-up that's attached to a product or

a usage report. You will be able to see a new item under Follow-Ups on your homepage. You will receive an email notifying about the follow-up as well.

For more training information, please click [here](#) for training materials.

### 3.15 Can I submit a “zero report” if I don't have any products to report on, didn't tape out any wafer or have any status change for existing products?

After you click **New Usage Report**, on the usage report screen, there will be a **Nothing to Report** button in the upper right corner. You can click **Nothing to Report** if:


- You have no products or products are in design and remain in design.
- You have tape out products but no wafer was purchased.
- No product status change for any existing products.

### 3.16 Why am I unable to log in with my existing username and password?

Single Sign-On has been incorporated for all usage reporting users. This will require e-mail address verification and will require you to sign up if you have not done so before.


To complete, follow the steps below:

1. Click on **Sign up now**.

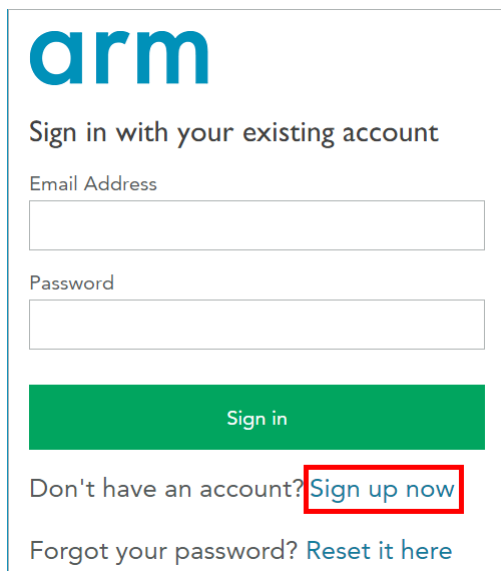**Figure 3-6: DesignStart sign up screen screenshot**

The screenshot shows the DesignStart sign-in and sign-up interface. At the top is the 'arm' logo in blue. Below it is the text 'Sign in with your existing account'. There are two input fields: 'Email Address' and 'Password'. Below these is a green 'Sign in' button. At the bottom, there are two links: 'Don't have an account? Sign up now' (where 'Sign up now' is highlighted with a red box) and 'Forgot your password? Reset it here'.

2. Input your corporate e-mail address and click **Send verification code**.

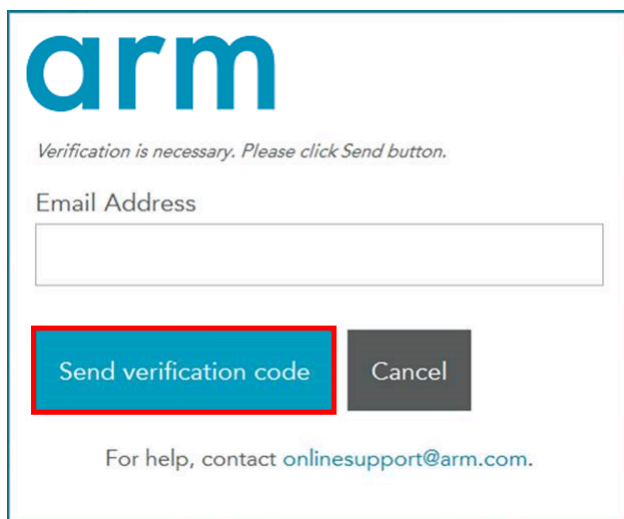**Figure 3-7: Verification code request screen**

The screenshot shows the verification code request screen. At the top is the 'arm' logo in blue. Below it is the text 'Verification is necessary. Please click Send button.' There is an 'Email Address' input field. Below the input field are two buttons: 'Send verification code' (highlighted with a red box) and 'Cancel'. At the bottom, there is a text line: 'For help, contact [onlinesupport@arm.com](mailto:onlinesupport@arm.com)'.

3. Enter the verification code that was sent to your e-mail address and then click **Verify code**.



**Figure 3-8: Enter verification code screen**

**arm**

Verification code has been sent to your inbox. Please copy it to the input box below.

Email Address

Please enter the verification code from the email we sent you

**Verify code** Send new code Cancel

For help, contact [onlinesupport@arm.com](mailto:onlinesupport@arm.com).

Security Notice: Please ensure that both 'https://' and 'arm.com' are displayed in the address bar above, to securely sign in.

4. Create and confirm a new password, then click **Create**.

**Figure 3-9: Create a new password screenshot**

**arm**

E-mail address verified. You can now continue.

Email Address

Your e-mail address has been verified

New Password


Confirm New Password

**Create** Cancel

For help, contact [onlinesupport@arm.com](mailto:onlinesupport@arm.com).

Security Notice: Please ensure that both 'https://' and 'arm.com' are displayed in the address bar above, to securely sign in.

5. After verification, you will be able to input your login credentials and **Sign In** to usage reporting system.

**Figure 3-10: Login to DesignStart screen**

Email Address

Password

**Sign in**

Don't have an account? [Sign up now](#)

Forgot your password? [Reset it here](#)

---

For help, contact [onlinesupport@arm.com](mailto:onlinesupport@arm.com).

**Security Notice:** Please ensure that both 'https://' and 'arm.com' are displayed in the address bar above, to securely sign in.